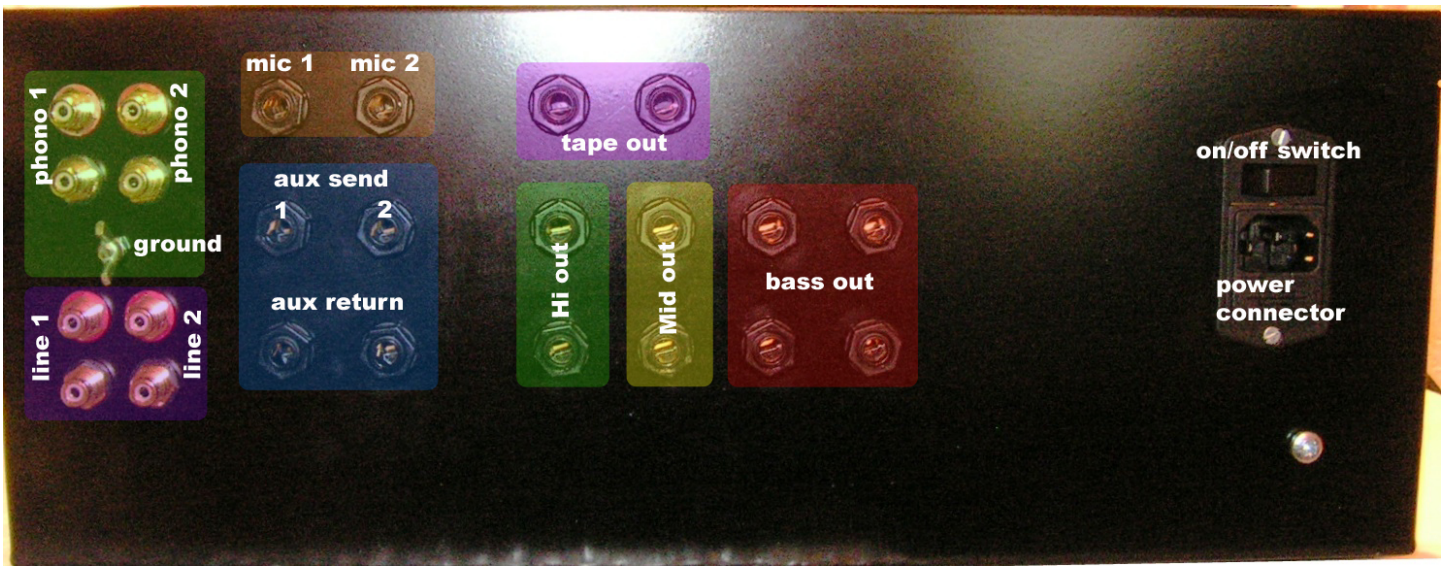
phono 1
phono 2
ground
line 1
line 2
mic 1
mic 2
aux send
1
2
aux return
tape out
Hi out
Mid out
bass out
on/off switch
power
connector